



Caring for OUTSY Outdoor Furniture: Preserving Elegance and Durability

OUTSY outdoor furniture is not just an addition to your outdoor space; it is a statement of style and sophistication. To ensure that your OUTSY furniture retains its exquisite allure and stands the test of time, proper care and maintenance are crucial. By following the recommended practices, you can safeguard your OUTSY outdoor furniture against the elements and maintain its stunning appearance season after season. In this comprehensive guide, we will delve into the best strategies for caring and maintaining your OUTSY outdoor furniture, allowing you to relish its longevity and timeless beauty for years to come.

WICKER AND POLYHYACINTH FURNITURE

OUTSY wicker furniture brings an element of elegance and charm to both indoor and outdoor spaces. To ensure that your wicker furniture retains its pristine condition, regular cleaning is essential. Follow these straightforward steps to effectively clean and maintain your OUTSY wicker furniture:

- 1. Prepare the cleaning solution:** Mix a mild detergent or dish soap with warm water in a bucket or basin. Avoid using harsh chemicals or abrasive cleaners, as they can damage the wicker material.
- 2. Dust off loose debris:** Use a soft brush or vacuum cleaner with a brush attachment to gently remove any loose dirt, dust, or cobwebs from the surface of the furniture.
- 3. Clean with the soapy solution:** Dip a soft cloth or sponge into the soapy solution and wring out the excess water. Gently scrub the wicker furniture, paying attention to any stains, spills, or areas that require extra cleaning. Be careful not to soak the wicker, as excessive moisture can weaken the material.
- 4. Rinse with water:** After cleaning, rinse the furniture thoroughly with clean water to remove any soap residue. A garden hose or a damp cloth can be used for this purpose. Ensure that no soap or water remains trapped in the crevices of the wicker.
- 5. Allow proper drying:** Place the wicker furniture in a well-ventilated area or under the sun to dry completely. Avoid direct sunlight, as prolonged exposure can cause the wicker to fade or become brittle.
- 6. Regular maintenance:** To keep your wicker furniture looking its best, perform regular maintenance. Dust it regularly with a soft brush or cloth, and promptly clean up any spills or stains to prevent them from setting in.



ALUMINUM FRAME

The aluminum frame of OUTSY outdoor furniture not only offers durability but also adds a sleek and modern touch to your outdoor space. To keep your aluminum furniture looking its best, regular cleaning is essential. Follow these simple steps to effectively clean and maintain the aluminum frame of your OUTSY outdoor furniture:

1. Gather the necessary materials: You will need a bucket of warm water, mild dish soap or a gentle detergent, a soft brush or sponge, and a clean cloth.
2. Remove loose dirt and debris: Begin by using a soft brush or cloth to gently remove any loose dirt, dust, or debris from the aluminum frame. Pay attention to the corners, crevices, and hard-to-reach areas.
3. Prepare the cleaning solution: Fill a bucket with warm water and add a small amount of mild dish soap or a gentle detergent. Mix the solution until it forms a soapy mixture.
4. Clean the aluminum frame: Dip the soft brush or sponge into the soapy solution and gently scrub the aluminum frame. Focus on areas with stains, dirt buildup, or grime. Avoid using abrasive brushes or scouring pads that may scratch the surface of the aluminum.
5. Rinse thoroughly: Once you have cleaned the aluminum frame, rinse it thoroughly with clean water. This will remove any remaining soap residue and ensure a spotless finish. Use a hose or a bucket of clean water for the rinsing process.
6. Dry the frame: Use a clean cloth or towel to dry the aluminum frame thoroughly. This will help prevent water spots or mineral deposits from forming on the surface.
7. Regular maintenance: Keep your aluminum frame looking its best by performing regular maintenance. Wipe it down with a clean, damp cloth to remove any surface dust or dirt. Promptly address any spills or stains to prevent them from becoming harder to clean over time.



TEAKWOOD

OUTSY teakwood outdoor furniture combines beauty and durability, showcasing the natural elegance of teakwood. To ensure the longevity and preserve the exquisite appearance of your OUTSY teakwood furniture, proper care and maintenance are crucial. Follow these important tips to care for your OUTSY teakwood outdoor furniture:

1. **Regular cleaning:** Keep your OUTSY teakwood furniture looking its best by regularly wiping it down with a soft cloth or sponge and a mild soap solution. This simple step will remove surface dirt, dust, and grime. Avoid using abrasive cleaners or brushes that may damage the wood.
2. **Avoid harsh chemicals:** Protect the natural oils of the teakwood by refraining from using harsh chemicals, bleach, or ammonia-based cleaners during the cleaning process. These substances can strip the wood of its natural oils, causing it to dry out.
3. **Prevent stains:** Act promptly to clean up spills and messes to prevent stains. Use a damp cloth or sponge to wipe away any food or liquid spills. If stains do occur, use a gentle teak cleaner specifically designed for teakwood furniture.
4. **Shield from direct sunlight:** To minimize fading, consider placing your OUTSY teakwood furniture in a shaded area or use umbrellas or outdoor covers to provide shade when it is not in use. Direct sunlight can cause the teakwood to naturally fade over time.
5. **Embrace natural aging:** Teakwood naturally weathers and develops a silver-gray patina over time when exposed to the elements. If you appreciate this aged look, you can let your OUTSY teakwood furniture age naturally without applying any oil or sealer. Regular cleaning and maintenance are still necessary to keep it in excellent condition.
6. **Seasonal storage:** If you live in an area with harsh winters or inclement weather, consider storing your OUTSY teakwood furniture indoors or in a covered area during the off-season. This precaution protects it from extreme temperature fluctuations and excessive moisture.



SUNBRELLA CUSHIONS WITH URECEL FOAM

OUTSY Sunbrella cushions with Urecel foam provide the perfect combination of comfort and durability for your outdoor furniture. To ensure their longevity and preserve their impeccable appearance, proper care and maintenance are essential. Follow these tips to care for your OUTSY Sunbrella cushions with Urecel foam:

How to hand wash OUTSY cushion covers:

1. Create a solution by mixing a quarter cup of mild dish detergent with a gallon of water.
2. Gently rub the cushion cover with a sponge, using the soapy solution. For stubborn stains, you can use a plastic-bristled brush to scrub them away.
3. Thoroughly rinse the cushion cover with a hose to remove any soap residue.

How to machine wash OUTSY cushion covers:

1. Unzip the cushion cover and remove the foam insert.
2. Place the cushion cover in the washing machine and select a gentle cycle, using a non-bleach detergent.
3. After washing, air-dry the cushion cover. Avoid using a dryer, as high heat may cause shrinkage or damage.
4. Once the cushion cover is completely dry, zip it back over the cushion foam for a perfect fit.

How to dry OUTSY cushion foam inserts:

1. Unzip the cushion covers and carefully remove the foam inserts.
2. Squeeze out any excess water from the foam by gently pressing or wringing it.
3. Lay the foam on its side or prop it against a wall to allow for proper air circulation during the drying process.
4. Once the foam inserts are completely dried, place them back inside the cushion covers and zip them up securely.